


## Epson TMU 675 Dip Switch Settings

1. Disconnect power. Turn over the TMU 675 and remove the small cover door (approx. 1' X 2") with a Phillips screwdriver.
2. Confirm the DSW2 DIP switch bank, switch 4 is in the "ON" position (a straightened paper clip can be used to change switch position).

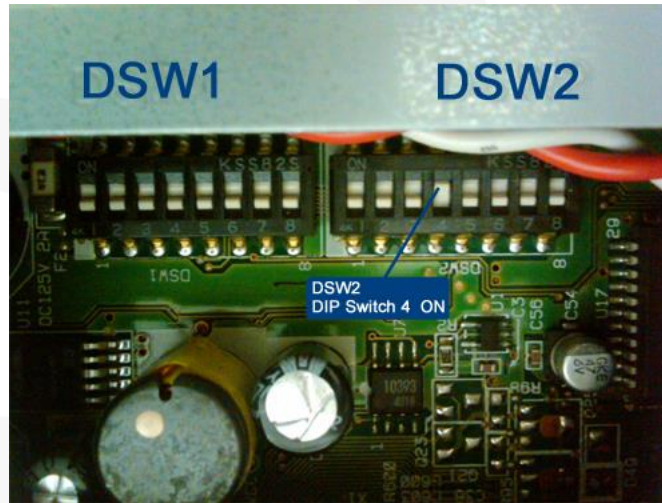

3. Replace cover.
4. Power on and test.